


HAUS SERVICE MANUAL

Order No.REF0905S002V0

DISHWASHER

Model No. DW9-AFM Series

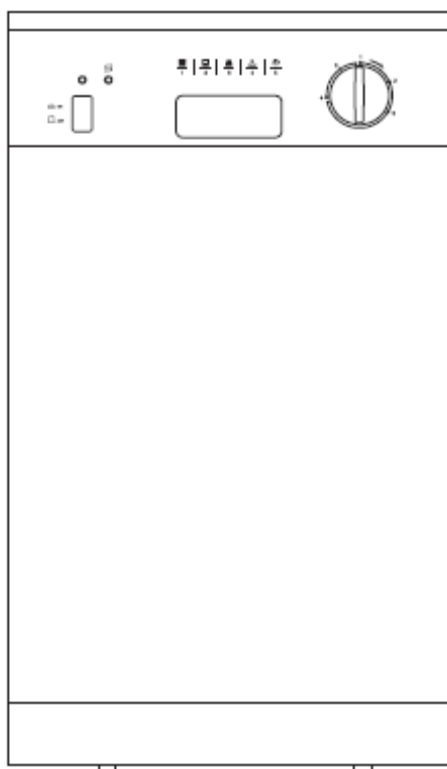

Customer helpline: 0845 600 4632

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

1-1. Contents

1-1. Contents	1
1-2. Features	3
1-2-1. A grade for energy consumption of European standard	3
1-2-2. B grade for washing efficiency of European standard	3
1-2-3. Bgrade for drying efficiency of European standard	3
1-2-4. Water softener for descaling	3
1-3. How to read this Service Manual	4
1-4. Safety Precaution	5
1-4-1. At time of delivery	5
1-4-2. During installation	5
1-4-3. During normal use	5
1-5. Installation	6
1-5-1. If your family includes children	6
1-5-2. If a fault occurs	6
1-5-3. When disposing of old appliances	6
1-5-4. Positioning the appliance	6
1-5-5. Leveling the appliance	6
1-5-6. Cold water connection	6
1-5-7. Hot Water Connection	7
1-5-8. Electrical Connection	7
1-5-9. Drain hose connection	8
1-6.Tools	9
1-7. Dissemble and assemble procedure	11
1-7-1. Water pressure switch disassembly	11
1-7-2. Detergent dispenser disassembly	14
1-7-3. Baseboard disassembly	14
1-7-4. Left/right side plate and baseboard disassembly	15
1-7-5. Side panel disassembly	15
1-7-6. Sump disassembly	16
1-7-7. Water softer disassembly	18
1-7-8. Heater disassembly	19
1-8. Parts and Functions	21
1-8-1. Close-up view (control panel)	21
1-8-2. Dishwasher interior	21
1-9. How to fill the salt	22
1-9-1. Salt	22
1-9-2. Loading the salt into the container	22
1-9-3. Adjusting salt consumption	22
1-10. How to fill rinse aid and detergent dispenser	24
1-10-1. How to fill rinse aid	24
1-10-2. How to fill detergent dispenser	24
1-11. Loading the dishwasher	25

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

1-11-1. How to use the lower rack.....	25
1-11-2. How to use the upper rack.....	25
1-11-3. Shelf	26
1-12. Turning on the Appliance	27
1-12-1. Switching the dishwasher ON	27
1-12-2. End of programme	27
1-13. Wash Cycle Table	28
1-14. How to keep your dishwasher in shape	30
1-14-1. After Every Wash	30
1-14-2. Remove the plug	30
1-14-3. No solvents or Abrasive Cleaning Products	30
1-14-4. Moving the Appliance	30
1-14-5. Seals.....	30
1-14-6. When You Go on Holiday	30
1-15. Clean and mentenance	31
1-15-1. Overall condition of appliance	31
1-15-2. Dishwasher salt	31
1-15-3. Filters	31
1-15-4. Spray arms.....	31
1-16. Maintenance Services and Trouble Shooting	32
1-16-1. Maintenance services.....	32
1-16-2. Trouble shooting	32
1-17. Analysis of the common breakdowns	35
1-17-1. Door switch trouble.....	35
1-17-2. Water supply trouble	36
1-17-3. Drain pump trouble	37
1-17-4. Heating element trouble	38
1-17-5. Water overflow trouble	39
1-17-6. Power supply trouble.....	40
1-17-7. Leak trouble	41
1-19. Technical data	42
1-20. Circuit Diagram	43

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

1-2. Features

1-2-1. A grade for energy consumption of European standard


1-2-2. B grade for washing efficiency of European standard

1-2-3. B grade for drying efficiency of European standard

1-2-4. Water softener for descaling

1-3. How to read this Service Manual



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Warning:

A “warning” is used when there is danger of personal injury.



Caution:

A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.



Notice:

A “notice” provides information that is not indispensable, but may nevertheless be valuable to the reader.

1-4. Safety Precaution

NOTICE

Carefully read the instructions contained in this manual, as they provide important information which is essential to safe and proper installation, use and maintenance of the appliance.



This appliance complies with the following EEC directives:

- 73/23/EEC of 19/02/73 (Low Voltage) and subsequent modifications;

- 89/336/EEC of 03/05/89 (Electromagnetic Compatibility) and subsequent modifications.

1-4-1. At time of delivery

Check packaging and dishwasher immediately for signs of transport damage. If the appliance is damaged, do not put it into use but contact your supplier or customer service without delay.

Please dispose of packaging materials properly.

1-4-2. During installation

Site the dishwasher and connect it up in accordance with the installation instructions.

The dishwasher must not be connected to the electricity supply while installation is being carried out.

Ensure that the domestic wiring is properly earthed.

The mains electricity supply must conform to the details shown on the dishwasher nameplate.

Do not connect the dishwasher to the electricity supply via an extension cable.

Built-under and built-in appliances should always be installed under a continuous work surface which is attached to the adjacent cupboards, in order to ensure that the appliance is entirely stable.

After the appliance has been installed, the mains plug should still be easily accessible.

Not on all models:

The plastic housing on the water inlet contains an electrically operated valve. The connecting wires are inside the inlet hose. Do not cut through this hose and do not immerse the plastic housing in water.

During installation, the power supply cord must not be excessively or dangerously bent or flattened.

1-4-3. During normal use

The dishwasher must only be used by adults for the washing of household dishes and cooking utensils.

This appliance cannot be installed outdoor, not even if the area in which it is installed is covered by a roof; it is also very dangerous to leave it exposed to the rain and elements.

Do not place any heavy objects or stand on the door when it is open. The appliance could tip forward.

The water inside the dishwasher is not suitable for drinking.

Do not use solvents of any kind inside your dishwasher. They could cause an explosion danger.

Open the door very carefully if the dishwasher is operating. There is a risk of water squirting out.

Do not touch the heating element during or after a wash cycle.

Fundamental rules to follow when using the appliance:

Never touch the dishwasher when barefoot or with wet hands or feet;

We discourage the use of extension cords and multiple sockets;

If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply.

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

1-5. Installation

1-5-1. If your family includes children

The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

Keep detergents out of the reach of children, who must also be kept away from the dishwasher when it is open.

1-5-2. If a fault occurs

If the appliance malfunctions, turn off water supply to the appliance and disconnect the plug from the wall socket. Then, consult the section entitled, "Fault finding" .If you cannot solve the problem, contact a service center.

Only specialized personnel are authorized to make repairs.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

To maintain the EFFICIENCY and SAFETY of this appliance, we recommend:

call only the Service Centers authorized by the manufacturer.

always use original Spare Parts.

1-5-3. When disposing of old appliances

Appliances which are no longer being used must be made inoperable by cutting the power supply cord and removing the door lock.

Take the appliance to a designated waste disposal center.



Dangerous voltage



Warning

Children could get locked in the appliance (risk of suffocation) or get stuck in other positions. Therefore: Remove the mains plug, cut the mains wire and set aside. Damage the door lock so that the door can no longer be closed.

1-5-4. Positioning the appliance

Positioning the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation.

1-5-5. Leveling the appliance

Once the appliance is positioned, adjust the feet (screwing them in or out) to adjust the dishwasher, making it level. In any case, the appliance should not be inclined more than 2°. If the appliance is level, it will help ensure proper performance.

1-5-6. Cold water connection

Connect the water supply hose to a threaded 3/4 (gas) connector, making sure that it is fastened tightly in place.

If the water pipes are new or have not been used for an extended period of time, let the water run to

make sure that the water is clear and free of impurities. If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance.



fig.A

1-5-7. Hot Water Connection

The water supply to the appliance can also be connected to the house's hot water line (centralised system, heating system), as long as it does not exceed a temperature of 60 °C.

In this case, the wash cycle time will be shortened by about 15 minutes and the wash efficiency slightly reduced.

The connection must be made to the hot water line following the same procedures as those for the connection to the cold water line.

Attention:

The special plastic hose support must be solidly fastened to the wall to prevent the drain hose from moving and allowing water to spill outside the drain.



Warning

The appliance is to be connected to the water mains using new hose-sets and that old hose-sets should not be reused.

1-5-8. Electrical Connection

After making sure that the voltage and frequency values for the current in the home correspond to those on the rating plate (located on the stainless steel inner door of the appliance) and that the electrical system is correct for the maximum voltage on the rating plate, insert the plug into an electrical socket which is earthed properly (the earthing of the appliance is a safety requirement mandated by law).

If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the whole cable, rather than using adaptors or the like as they could cause overheating and burns.




Caution:

The dishwasher plug must be accessible even when the appliance is installed as a built-in unit so that maintenance can be done safely.

1-5-9. Drain hose connection

Insert the drain hose into a drain pipe with a minimum diameter of 4cm, or let it run into the sink, making sure to avoid bending or crimping it. If necessary, fit a syphon trap (U-bend) with a connecting piece for the drain hose (fig.C). The free end of the hose must be at a height between 40 and 100 cm and must not be immersed in water.

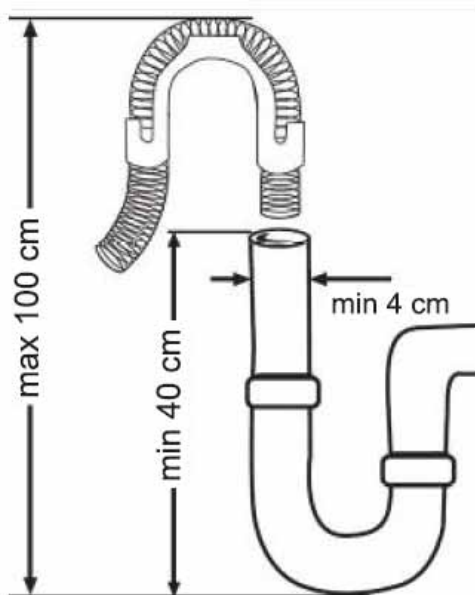

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

1-6.Tools

Screwdriver



- Disassemble and assemble for dishwasher components

Cross-screwdriver




- Disassemble and assemble for dishwasher components

Blade




- Unpacking

Electric drill

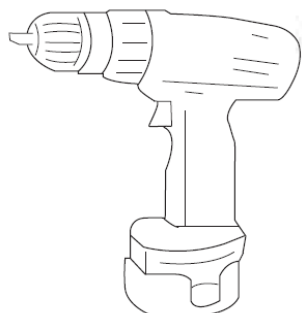

- Drill holes while installation

Spanner

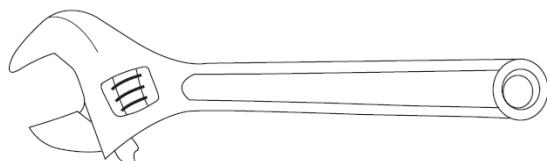

- Combine the inlet hose


Service Manual

Model No: DW9-AFM Series

Issue


Rev.

Multimeter

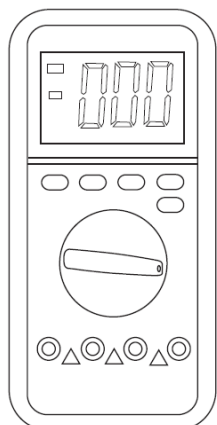

- Used for measuring the PCB and Display board

Soldering iron

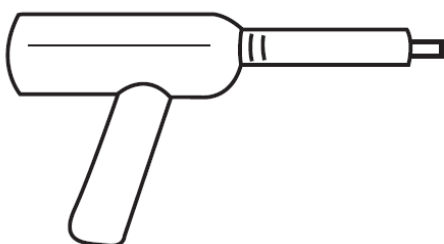

- Used for Jointing the PCB and Display board

Pliers



- Used for removing the pipe hoop and clips

1-7. Disassemble and assemble procedure



1-7-1. Water pressure switch disassembly




- Water pressure switch locates in the behind of the tub on the right and is fixed in straight pole.

- Put the guiding groove up until to the top which is ringent.

- Press the wedge of the water pressure switch until it comes out of slot with hands.

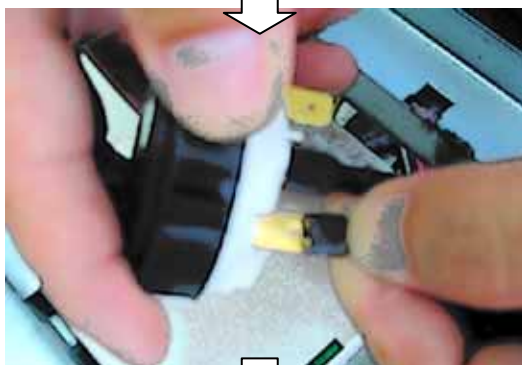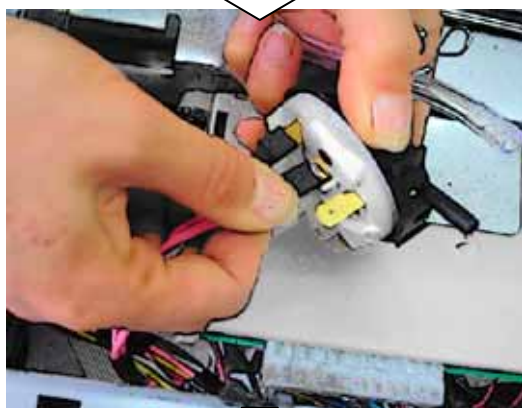

- Press the pinchcock at full tilt with your hands and then pull the pipe out.
- With stand the raised parts of the 1/4S quick connect terminal with thumb and then pull it out.
- Change the old water pressure switch into a new one.
- Insert cable line in, connection method is just like the picture on the left.

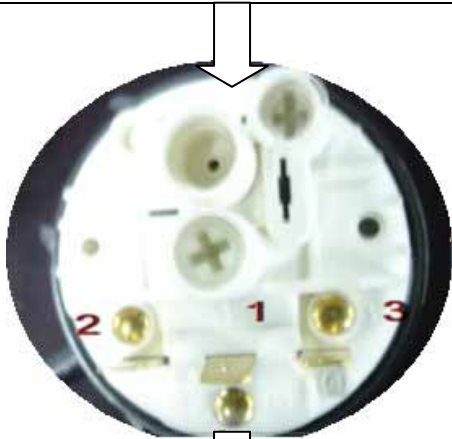

■ Connection method: there are several corresponding number marks on the component at the position of 1,2,3 showing on the left picture.

■ Connect the pipe together. Attention: pipe must be put on the interspaces between vent hole and the tub.

■ Put the pressure switch wedge into the large ring slot part and then push it until to the slot bottom.

■ Put the pipe to the smaller ring place of its bottom and then the installation is completed.


Service Manual

Model No: DW9-AFM Series

Issue


Rev.

1-7-2. Detergent dispenser disassembly

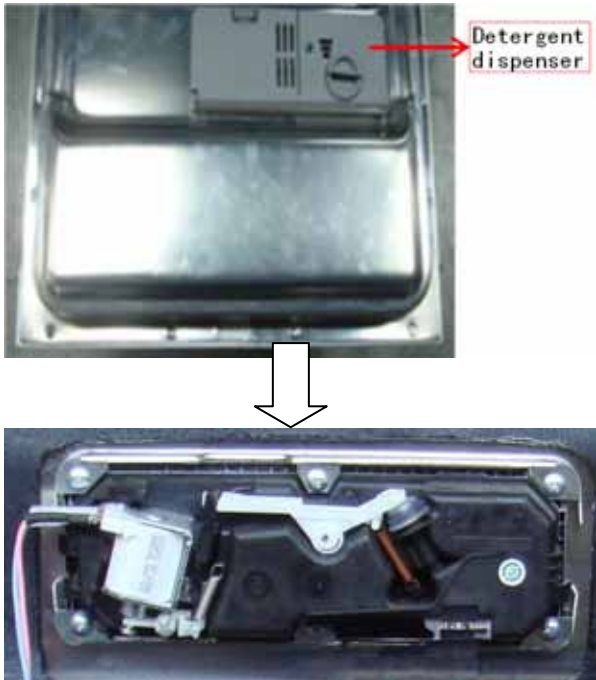


- Open the door, disassemble the outer door (Accord to the disassembly step)
- Close the door, use screwdriver to drive the 6 screws of Detergent Dispenser off, pull the wire out, then open the door, and get the Detergent Dispenser off.

1-7-3. Baseboard disassembly

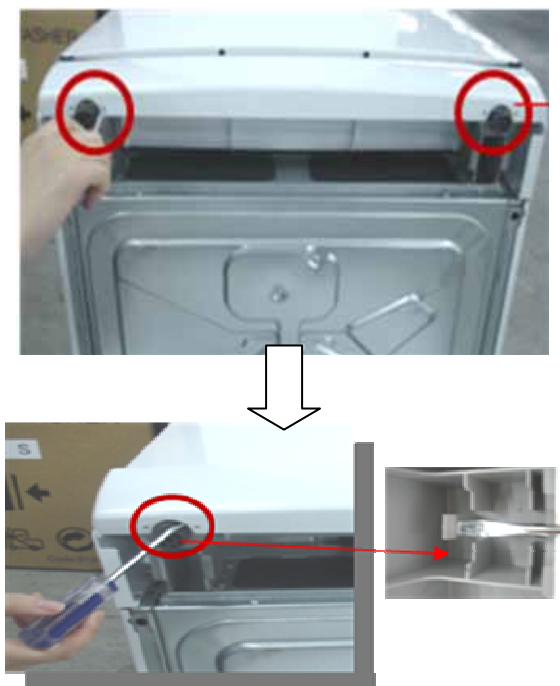


- Lie the machine down, use ross-screwdriver to drive two screws on baseboard off
- Use screwdriver to push the baseboard off the support foot, don't put big force to avoid break the stator.

1-7-4. Left/right side plate and baseboard disassembly

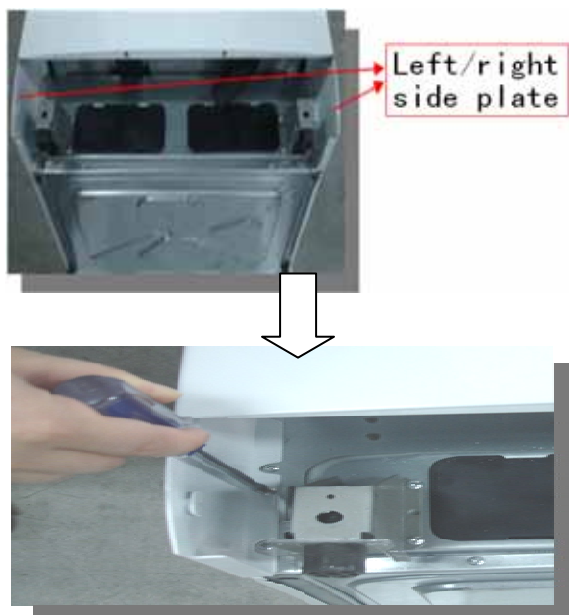

- Disassemble the baseboard(Pls find the pic of baseboard)
- Use cross-screwdriver to drive two screws off the side panel

1-7-5. Side panel disassembly

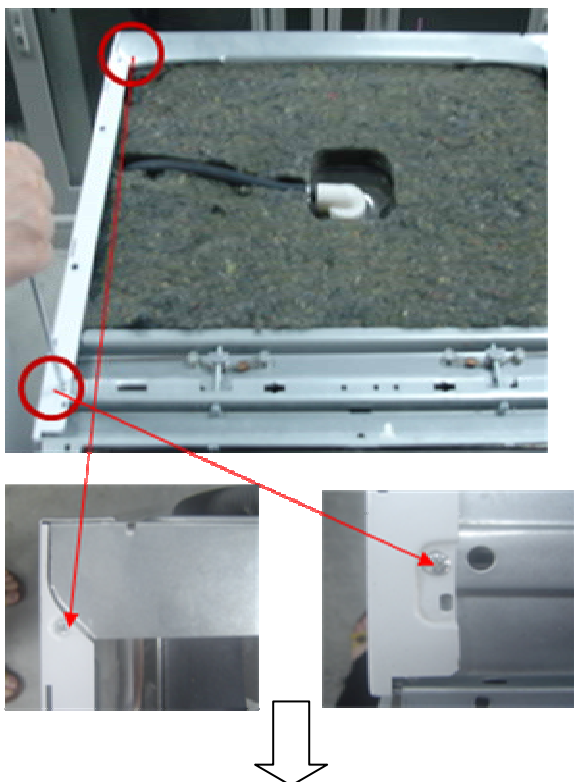


- Disassemble the Complete top(pls follow the disassembly step), use the cross-screwdriver to drive two screws which are on left top of machine, off side panel

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

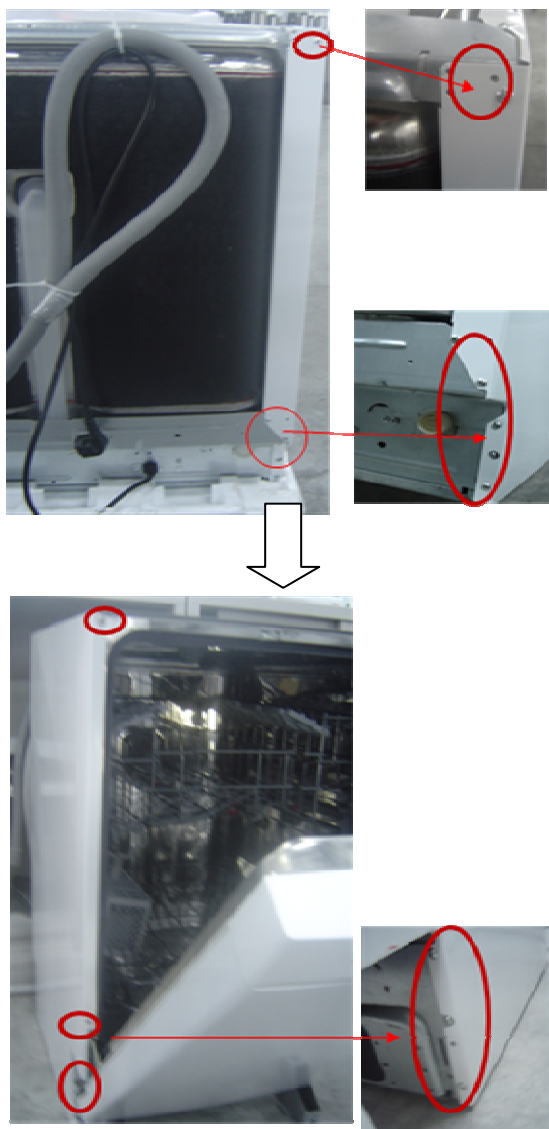


- Use the cross-screwdriver to drive five screws which are in left back of machine, off the right side panel
- Open the door, use the cross-screwdriver to drive four screws which are in left front, off

1-7-6. Sump disassembly



- Disassembly the drain pump refer to with the way required for the drain pump.

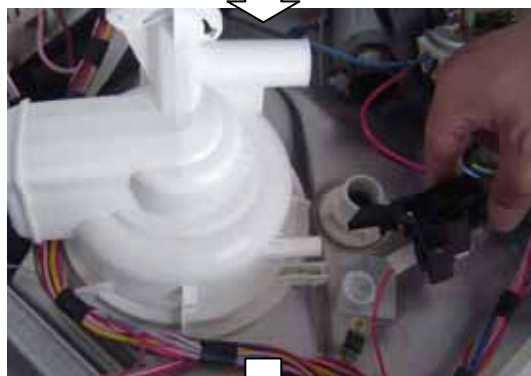

- Disassembly the wash pump refer to with the way required for the wash pump.

- Remove the rubber pipe of the sump

- Remove the transparent pipe of the water level switch.

- Disassembly the temperature sensor with black plastic bracket



- screw the Ring nut for sump fastening out with an anticlockwise way .
- Sump are dissembled completly

1-7-7. Water softer disassembly



- Lay the dishwasher on the floor, then remove the bottom cover, pull out the connector of the salt adding valve and the low salt switch
- Remove the three clips for fixing the rubber connect pipe, then pull out the rubber pipe
- Open the out door, you can see the salt adding cover, then circumrotate the cover anticlockwise and screw it down.



- Circumrotate the fixing set of the water softer anticlockwise, then screw it down (you can use the disassembly tool to operate)
- Then take the water softer down accordingly.

1-7-8. Heater disassembly



- Remove the two self-drilling bolts for fixing the heater bracket from the middle bar, then remove the heater.
- Pull out the three connectors of the heater.
- Remove the pipe hoop.

Service Manual

Model No: DW9-AFM Series

Issue


Rev.



- Remove the connector pipe of the hot pump and the middle hot pump ,then can take the heater down.

1-8. Parts and Functions

1-8-1. Close-up view (control panel)

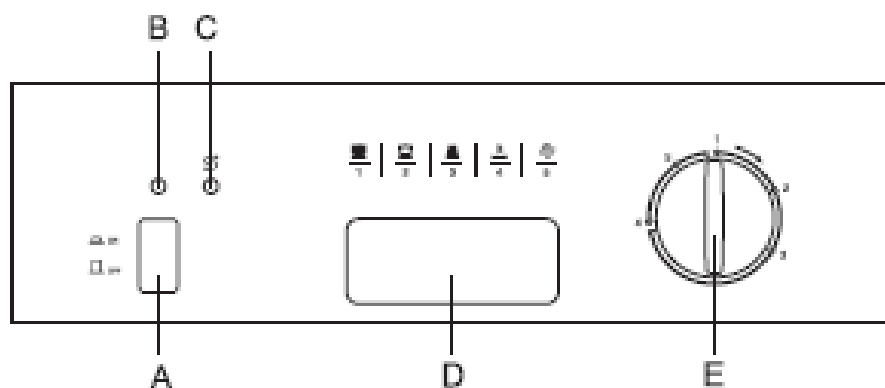

A ON-OFF Button


C Low Salt Indicator

E Programme selection dial.

B "ON-OFF" Light

D Door handle Knob For Selecting Cycle

1-8-2. Dishwasher interior

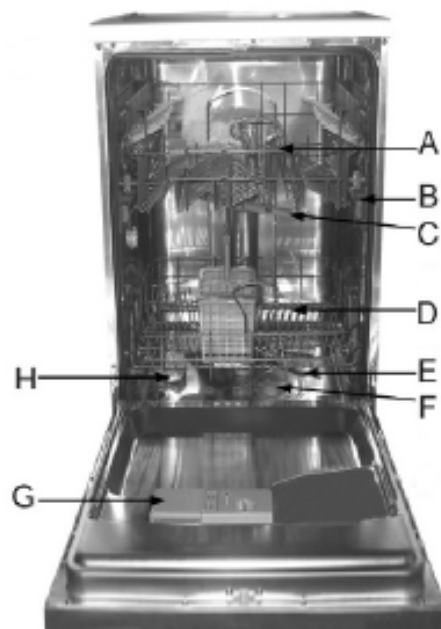

A Upper Rack

B Rack Height Adjustor

C Top Spray Arm

D Lower Rack

E Bottom Spray Arm

F Washing Filter

G Detergent and Rinse Aid Dispenser

H Salt Container Cap

1-9. How to fill the salt

1-9-1. Salt

The hardness of the water varies from place to place. If hard water is used in the dishwasher, deposits will form on the dishes and utensils.


The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water.

1-9-2. Loading the salt into the container

Always use salt intended for use with dishwashers.

The salt container is located beneath the lower rack and should be filled as follows:

- When the low salt indicator lights, you must fill the salt.
- Remove the lower rack and then unscrew and remove the cap from the salt container;
- If you are filling the container for the first time, fill it with water;
- Place the end of the funnel (supplied) into the hole and introduce about 2 kg of salt. It is normal for a small amount of water to come out of the salt container.
- Carefully screw the cap back on.

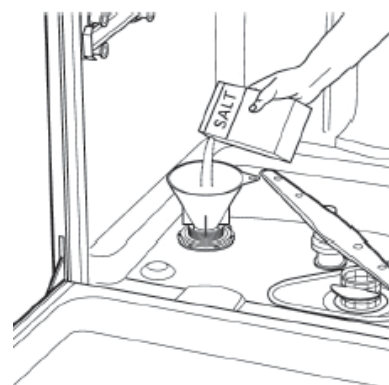

Important

To prevent the formation of rust, load the salt just before beginning a wash cycle.

1-9-3. Adjusting salt consumption


The dishwasher is designed to allow for adjusting the Amount of salt consumed based on the hardness of the water used.

This is intended to optimize and customize the level of salt consumption so that it remains at a minimum.

To adjust salt consumption, proceed as follows:

- Unscrew the cap from the salt container;
- There is a ring on the container with an arrow on it (see figure to the side),
- If necessary, rotate the ring in an anticlockwise direction from the "-" setting towards the "+" sign, based on the hardness of the water being used.

It is recommended that adjustments be made in accordance with the following table:

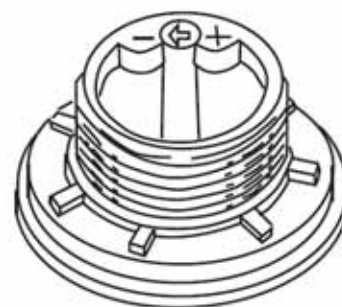

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

Water Hardness

Level	Clarke degrees	°dH	mmol/l	Selector position	Salt consumption (Grams/cycle)	Autonomy (cycles/2kg)
1	0-14	0-17	0-1,7	/	0	/
2	14-36	18-44	1,8-4,4	"-"	20	60
3	36-71	45-89	4,5-8,9	Middle	40	40
4	>71	>89	>8,9	"+"	60	25

1-10. How to fill rinse aid and detergent dispenser

1-10-1. How to fill rinse aid

1-10-1-1. Rinse aid

This product makes dishes sparkle and helps them to dry without spotting. The dispenser is located on the inside panel of the door.

1-10-1-2. Loading the rinse aid

Regardless of the type of detergent dispenser installed on your appliance, you must proceed as indicated below when loading the rinse aid.

To open the dispenser, turn the "1" cap in an anti-clockwise direction and then pour in the rinse aid, making sure not to overfill. The amount of rinse aid used for each cycle can be regulated by turning the "2" dose adjuster, located beneath the "1" cap, with a screwdriver.

There are 6 different settings; the normal dosage setting is 3.



Important

Proper dosage of the rinse aid improves drying. If drops of water remain on the dishes or spotting occurs, the dosage adjuster should be turned to a higher setting. If the dishes have white streaks, turn the dosage adjuster to a lower setting.

1-10-2. How to fill detergent dispenser

1-10-2-1. Detergent

Detergent specifically intended for use with dishwashers must be used. The dispenser must be refilled before the start of each wash cycle following the instructions provided in the "Wash Cycle Table". The detergent dispenser is located on the inside panel of the door.

1-10-2-2. Loading the detergent

To open the "3" cover on the dispenser, press the "4" button. The detergent for the wash cycle should be poured into the "5" compartment.



The detergent for the pre-wash cycle should be poured into the "6" compartment.

After the detergent has been placed in the dispenser, close the cover and press down until it clicks in place.



Notice:

To facilitate closing the cover, remove any excess detergent on the edges of the dispenser.

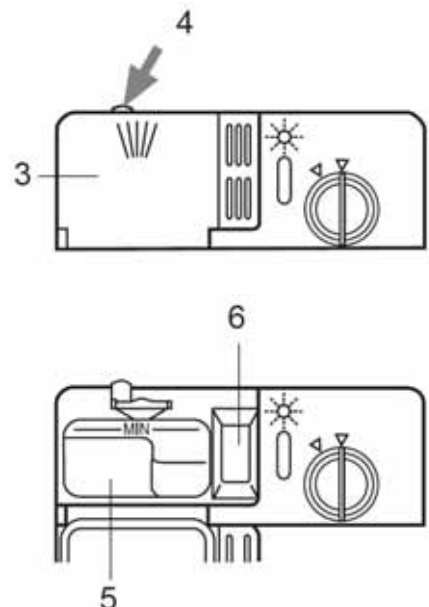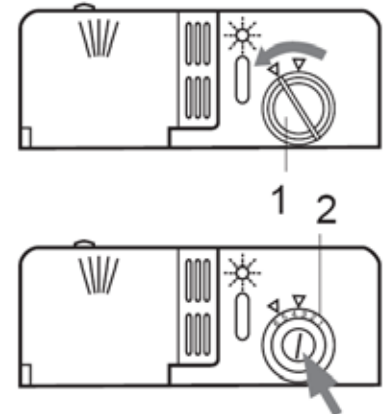

1-11. Loading the dishwasher

Before placing the dishes in the dishwasher, remove larger food particles to prevent the filter from becoming clogged, which results in reduced performance.

If the pots and pans have baked-on food that is extremely hard to remove, we recommend that they are soaked before washed. This will eliminate the need for extra wash cycles.

Pull out the rack to load the dishwasher.

1-11-1. How to use the lower rack

We recommend that you place the most difficult to clean items on the bottom rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right.

It is preferable to place serving dishes and lids on the sides of the racks in order to avoid blocking the rotation of the top spray arm.

--Pots, serving bowls, etc. must always be placed face down (see fig.D).

--Deep pots should be slanted to allow the water to flow out.

Normal daily load

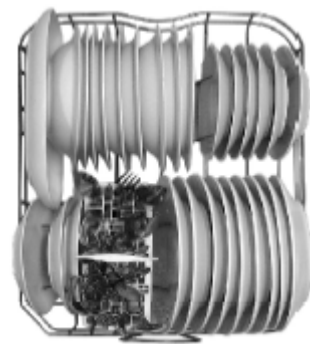


fig.D



Warning


knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.

1-11-2. How to use the upper rack

The upper rack is designed to hold more delicate and lighter dishware, such as glasses, cups and saucers, plates, small bowls and shallow pans (as long as they are not too dirty).

--Position the dishes and cookware so that they do not get moved by the spray of water.

--The upper rack can be adjusted for height by using the knobs located on both sides of the rack itself (see fig. G).

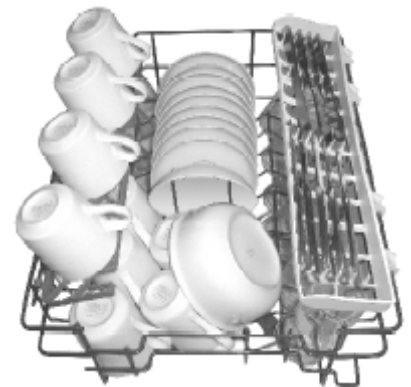

Adjust the upper basket to the higher level and you have more space to accommodate those taller pans and trays in the bottom basket.

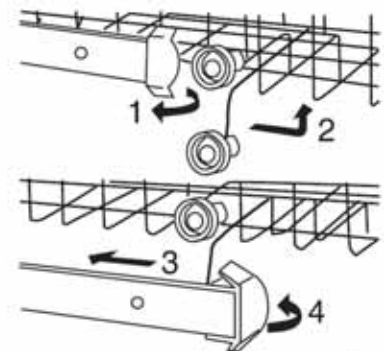



fig.G

1-11-3. Shelf

Lean tall glasses and those with long stems against the shelf not against other items to be washed.

Place glasses, cups and small bowls on the additional cup rack.

The additional cup rack can be swiveled in or out as required (see fig.H)

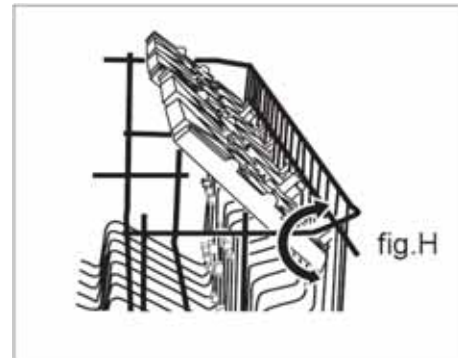

1-12. Turning on the Appliance

1-12-1. Switching the dishwasher ON

- Make sure the appliance is plugged in.
- Make sure that the water supply is turned on and the tap fully open.
- Load the dishwasher.
- Pour in the detergent.
- Turn the program dial in a clockwise direction to select the desired program.
- Press the "ON-OFF" button, and the "ON-OFF" light will turn on. At this point, the wash cycle will begin.



Notice

When washing, the dial will rotate automatically.






1-12-2. End of programme

When the dial reaches the STOP mark (see figure), the cycle has finished. Turn off the appliance using the ON-OFF button and open the door of the dishwasher. Wait a few minutes before unloading the dishwasher to avoid handling the dishes and utensils while they are still hot and more susceptible to breakage. They will also dry better.

1-12-3. Cancelling or modifying a wash cycle setting...

Press the ON-OFF button and the ON Light will turn off. Rotate the dial clockwise to the desired cycle setting. Then, turn the dishwasher back on using the ON-OFF button.

1-13.Wash Cycle Table

Cycle	Cycle Selection Information	Description of cycle	Detergent	Rinse aid
 Heavy Duty	Very dirty dishes,pots and pans(not to be used with delicate items).	Pre-wash with hot water. Extended wash at 55°C. Rinse with cold water. Rinse with hot water. Drying.	30g	★
 Normal Wash EN 50242	Normally dirty dishes,pots and pans .Standard daily cycle.	Extended wash at 55°C. Rinse with cold water. Rinse with hot water. Drying.	27g	★(5)
 Rinse	For dishes that need to be rinsed and dried only.	Rinse with cold water. Rinse with hot water. Drying.		★
 Rapid Wash	Economic,fast cycle to be used to on not very dirty dishes right after they are used. No drying cycle.	Short wash at 55°C. Cold rinse.	15g	
 Soak	Pre-wash of dishes, pots and pans while waiting for the load to be complete after the subsequent meal.	Short cold wash to prevent food residue from drying on the dishes .		

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

1-14. How to keep your dishwasher in shape

1-14-1. After Every Wash

After every wash, turn off the water supply (not necessary for models with “Aquastop”) the appliance and leave the door slightly ajar so that moisture and odors are not trapped inside.

1-14-2. Remove the plug

Before cleaning or performing maintenance, always remove the plug from the socket. Do not run risks.

1-14-3. No solvents or Abrasive Cleaning Products

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Rather, use only a cloth and warm soapy water.

To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little white vinegar, or cleaning product made specifically for dishwashers.

1-14-4. Moving the Appliance

If the appliance must be moved, try to keep it in a vertical position. If absolutely necessary, it can be positioned on its back.

1-14-5. Seals

One of the factors that cause odors to form in the dishwasher is food that remains trapped in the seals.

Periodic cleaning with a damp sponge will prevent this from occurring.

The door should not be left in the open position since this could present a tripping hazard.

1-14-6. When You Go on Holiday

When you go on holiday, it is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly ajar. This will help the seals last longer and prevent odors from forming within the appliance.

1-15. Clean and mentenance

Regular inspection and maintenance of your appliance helps to prevent problems from occurring. This saves time and aggravation. You should therefore carefully inspect the inside of your dishwasher from time to time.



1-15-1. Overall condition of appliance

Check that no grease or scale has accumulated on the inside of the dishwasher.

If you discover any deposits:

Clean the interior of the dishwasher thoroughly with a detergent solution.

1-15-2. Dishwasher salt

Check the low salt indicator. Top up with salt, if required.

1-15-3. Filters

The filters "7", "8" prevent larger particles of food in the water from reaching the pump. These particles may occasionally block the filters.

--When the appliance has finished washing, check the filters for particles of food and, if required, clean.

--After undoing the coarse micro-filter "7", the filter unit "8" can be removed. Remove any particles of food and rinse the filters under running water.

--Insert the filter unit "8" and tighten the coarse micro-filter.

1-15-4. Spray arms

Lime and remnants of food in the washing water can block the nozzles in the spray arms "9" and "10" and the arm mountings.





--Inspect the nozzles in the spray arms for blocked holes due to remnants of food.

--If necessary, pull the lower arm "10" upwards and lift it off.

--Unscrew the upper spray arm "9".

--Clean both spray arms under running water.

--Refit the spray arms. Ensure that the lower arm has locked into place and the upper one is screwed tight.

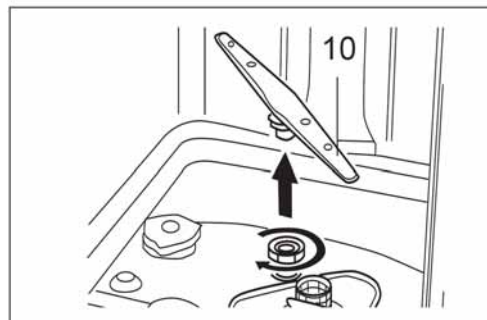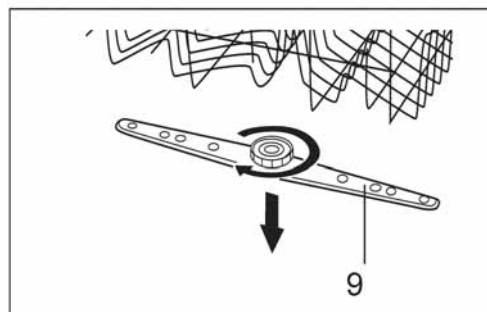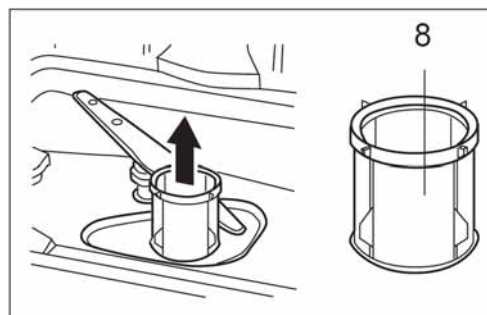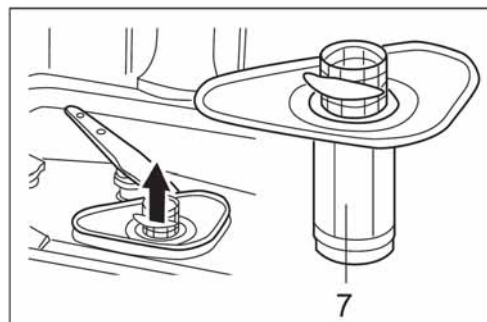

1-16. Maintenance Services and Trouble Shooting

1-16-1. Maintenance services

It may occur that the dishwasher does not function or does not function properly , before calling for assistance, let us see what can be done first: have you forgotten to press one of the buttons or to perform an essential operation?

1-16-2. Trouble shooting

when the appliance is switched on

Appliance does not start up

Fault with fuse in mains electricity supply.

Plug not inserted in wall socket.

Appliance door not closed properly.

Programme button has not been pressed.

Water tap not turned on.

Blocked strainer in water intake hose.

The strainer is situated in the Aquastop or supply-hose connection.



Caution

Do not forget that repairs should only be carried out by a qualified specialist. Improper repairs can lead to considerable equipment damage as well as danger to the user.

If you take all these checks and the dishwasher still does not function or your dishwasher have any other error display, you can power the dishwasher OFF, and wait a few minutes. You can power the dishwasher on, try it again , if the dishwasher still does not function and/or the problem persists, contact the nearest authorised service center and provide them with the following information:

--the nature of the problem.

--the model type number (Mod...) And the serial number (S/N...), which are indicated on the plate located on the side of the inner part of the door.

Lower spray arm rotates with difficulty

--Spray arm is blocked by small items or food remains.

Lid in detergent compartment cannot be closed

--Detergent compartment has been overfilled.

--Mechanism is clogged with remnants of detergent.

Indicator lamps do not extinguish after washing has finished

--Main switch is still set to ON.

Remnants of detergent stuck inside dispenser

--Compartment was damp when it was filled up with detergent. Compartment must be dry before detergent is added.

Water remains inside appliance after programme has ended

--Blockage or kind in drainage hose.

--Pump is jammed.

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

--Filters are blocked.

--The programme is still running. Wait for the programme to end .

during washing

Unusual amount of foam is creased

--Normal washing up liquid has been poured into the rinse-aid container.

--Remove any spilled rinse aid with a cloth as it could otherwise lead to excessive foaming during the next washing cycle.

Appliance stops suddenly while washing is taking place

--Cut off electricity supply to appliance.

--Water supply has been interrupted.

Knocking sound can be heard while washing is taking place

A spray arm is knocking against the dishes inside the appliance.

Rattling sound can be heard while washing is taking place

Crockery has not been stacked properly inside the appliance.

Knocking sound coming from inlet valves

This is caused by the way the water pipes have been laid and it has no effect upon the way the appliance functions. There is no remedy for this.

with the dishes,cutlery, etc.

Remnants of food are stuck to the dishes, cutlery,etc.

--Dishwasher was not loaded properly. Jets of water could not reach all parts of the dishes, ect.

--Too many items in the rack.

--Items in the rack were touching each other.

--Not enough detergent was added to dispenser.

--Selected wash programme was not intensive enough.

--Rotation of spray arm was obstructed by dishes, etc.

--N ozzles in spray arm are blokcked by remnants of food.

--Filters are blocked.

--Filters have been incorrectly fitted.

--Waste-water pump is jammed.

Plastic items are discoloured

--Not enough detergent was added to dispenser.

--Detergent has insuffcient bleaching properties. Use a detergent containing a chemical bleaching agent.

White stains are left on crockery, glasses have a milky appearance

--Not enough detergent was added to dispenser compartment.

--Amount of rinse-aid was set too low.

--Although water is quite hard, no salt has been put in appliance.

--Water softener was set too low.

--Lid on salt container is not screwed tight.

--If you used a phosphate-free detergent , try a detergent containing phosphates and compare results.

Dishes,cutlery,etc.have not been dried

--Selected programme did not include drying function.

--Amount of rinse-aid was set too low.

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

--Items were removed from dishwasher too soon.

Glasses have a dull appearance

--Amount of rinse-aid was set too low.

Tea stains or traces of lipstick have not been completely removed

--Detergent does not have a sufficient bleaching effect.

--Washing temperature was set too low.

Traces of rust on cutlery

--Cutlery is not sufficiently rustproof.

--Salt content in washing water is too high.

----Lid on salt container is not screwed tight.

----Too much salt was spilt while filling container.

Glasses become clouded and discoloured; coating cannot be wiped off

Unsuitable detergent was used.

Glasses are not dishwasher-proof.


Smears left behind on glasses and cutlery; glasses have acquired a metallic appearance

Amount of rinse-aid set too high.

1-17. Analysis of the common breakdowns


1-17-1. Door switch trouble

Phenomenon: the dishwasher does not work

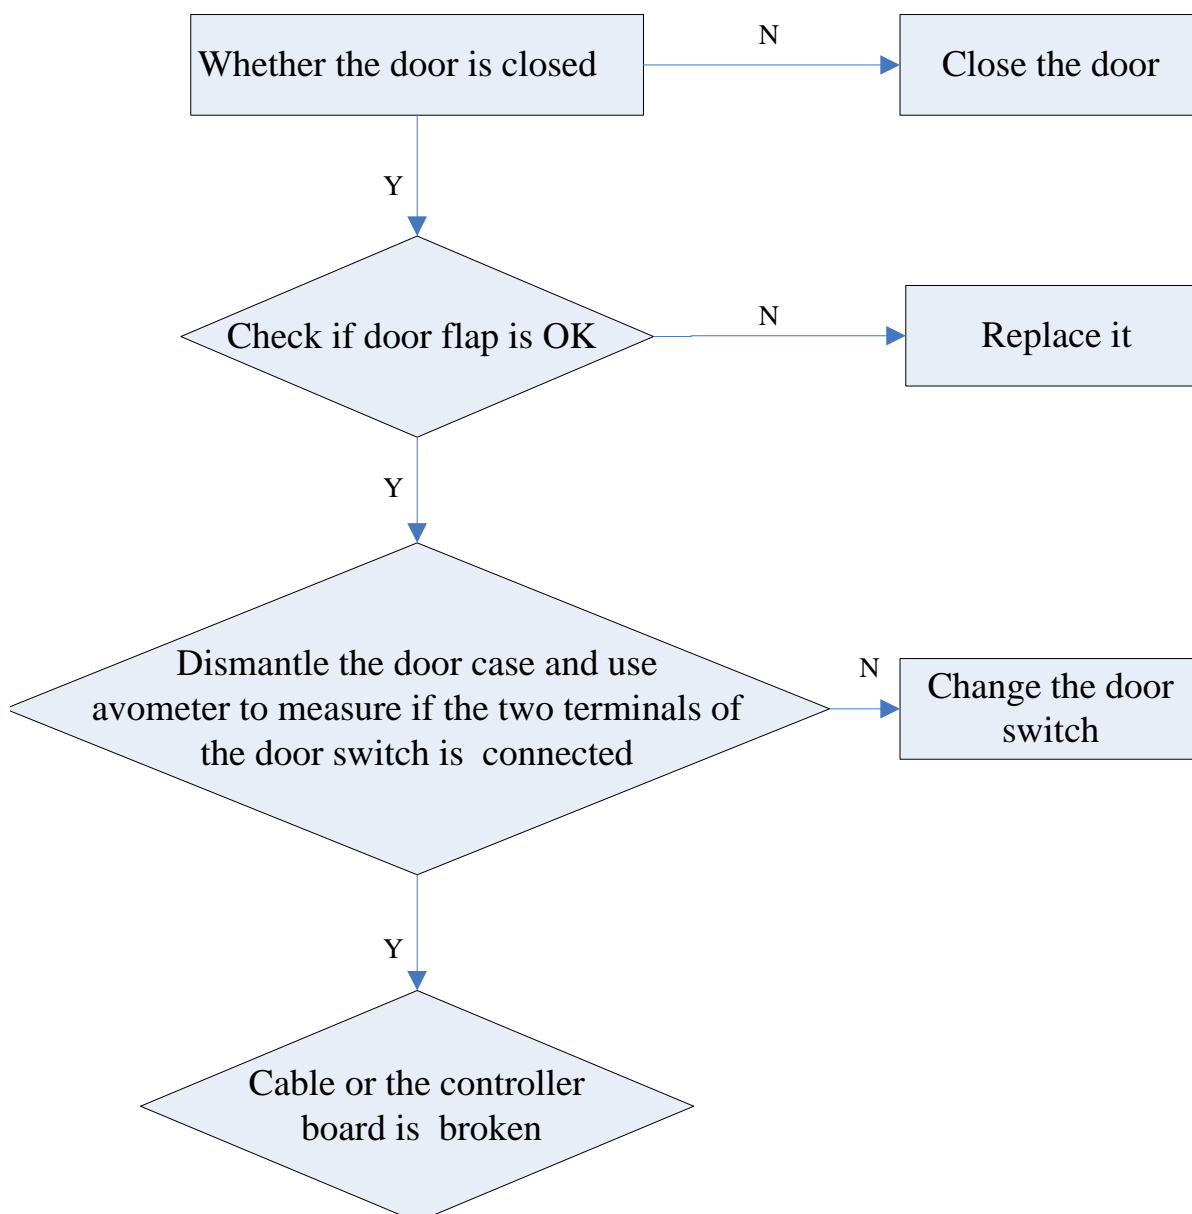


1-17-2. Water supply trouble

Phenomenon: water level cannot reach the required location

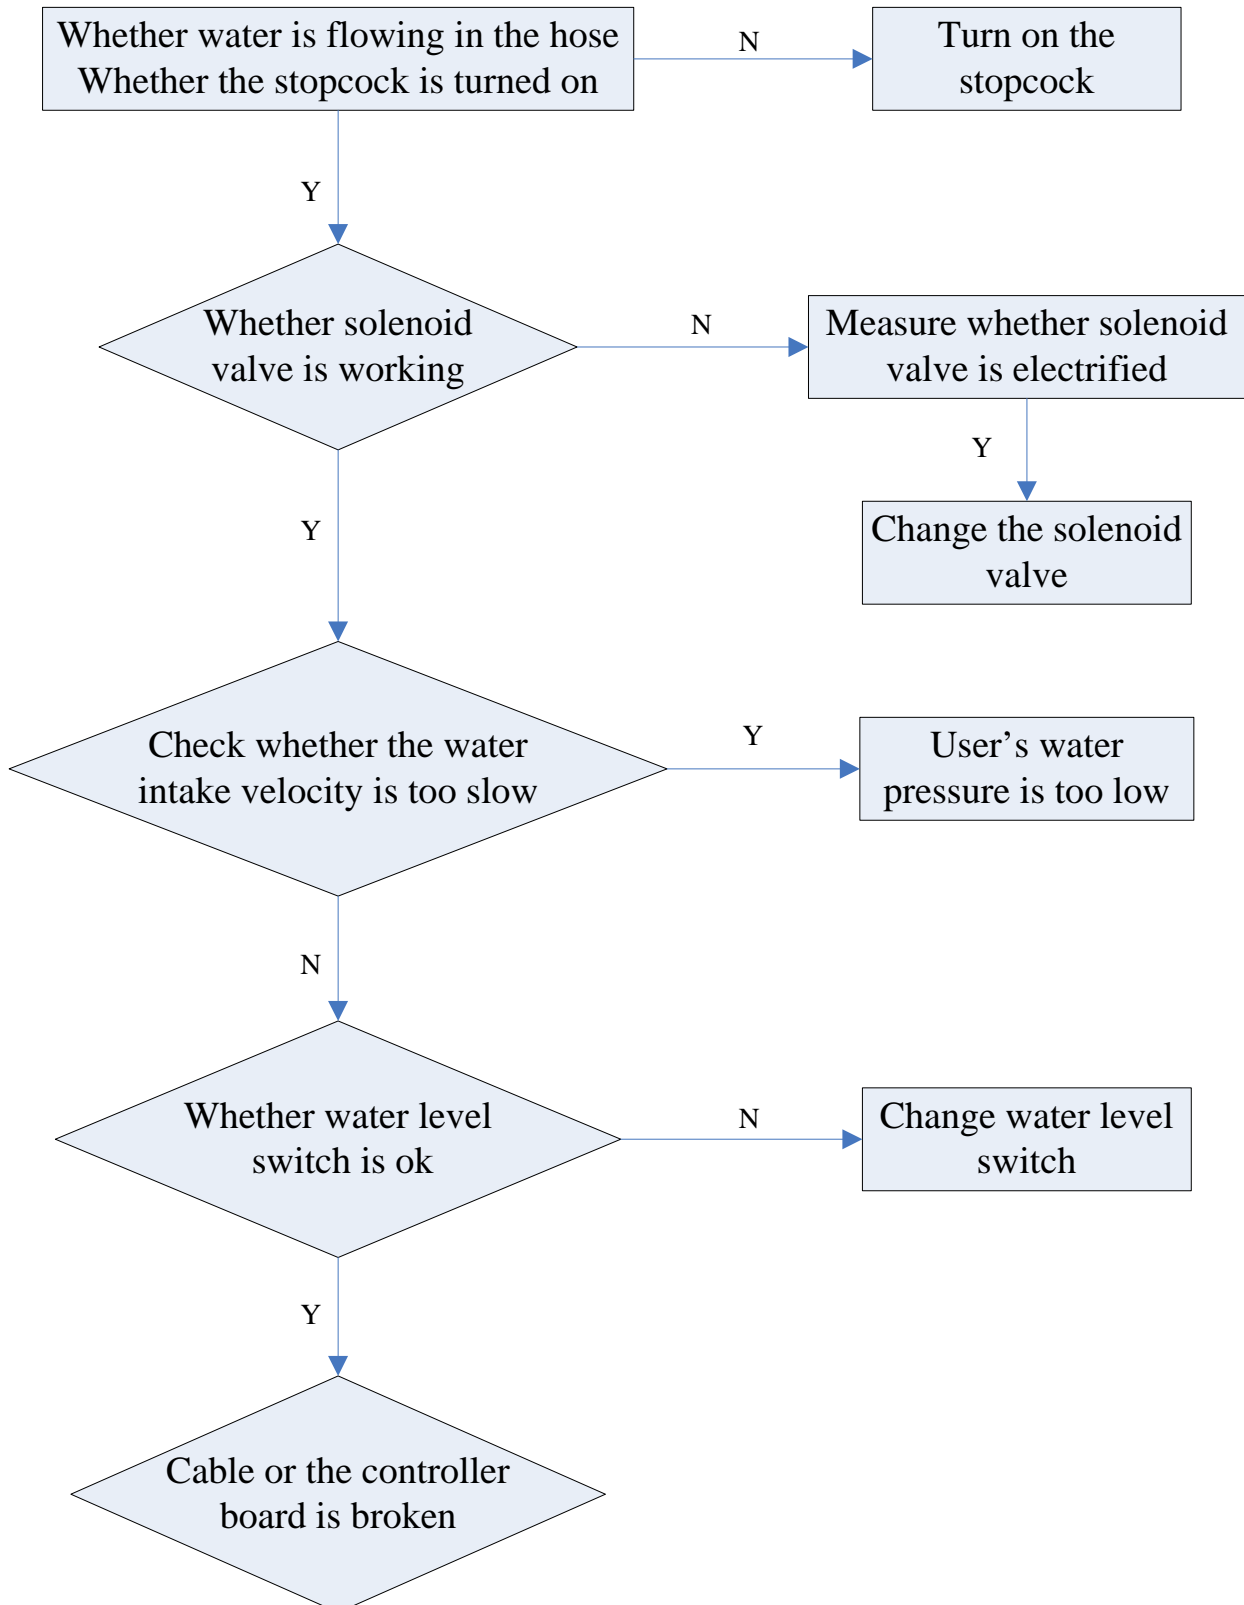


1-17-3. Drain pump trouble

Phenomenon: water cannot be drained

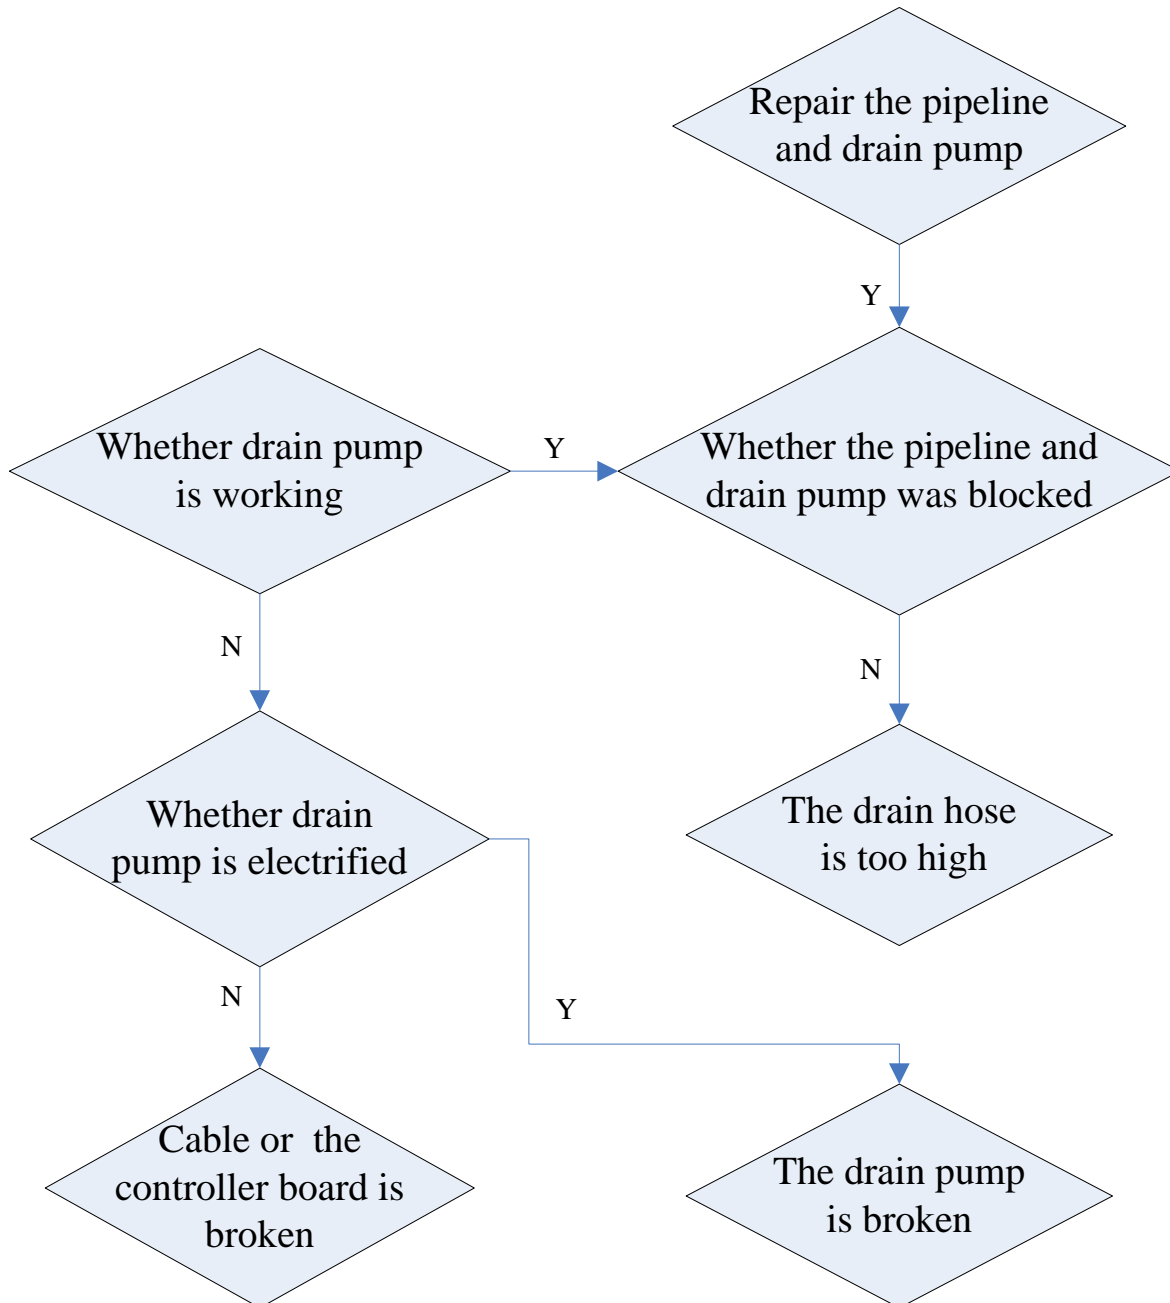


1-17-4. Heating element trouble

Phenomenon: Heating element cannot work

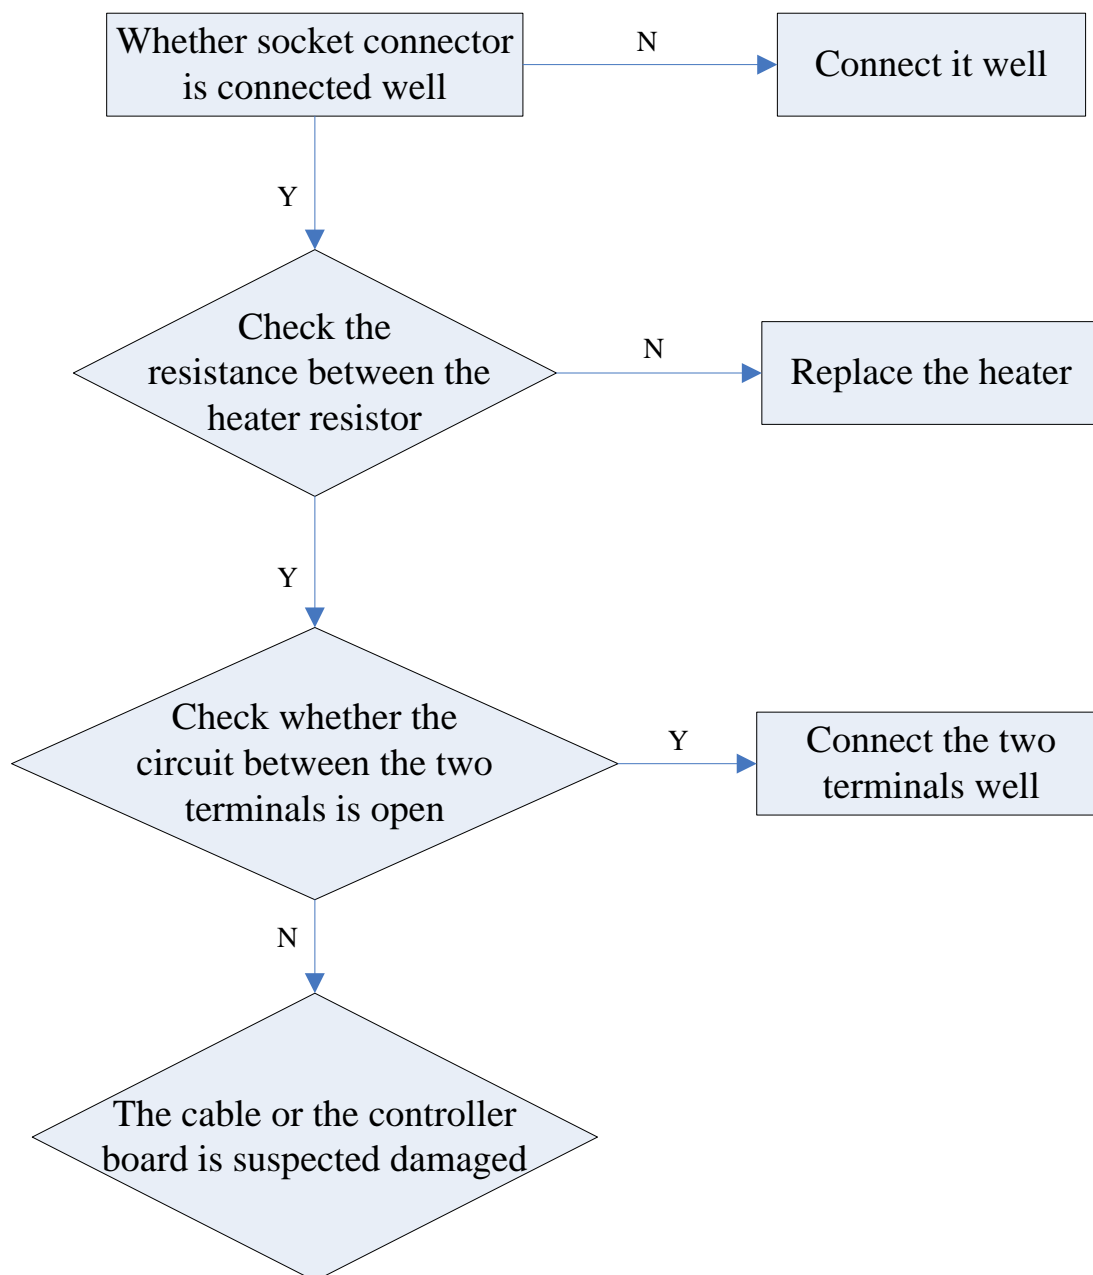


1-17-5. Water overflow trouble

Phenomenon: drain pump keep on working

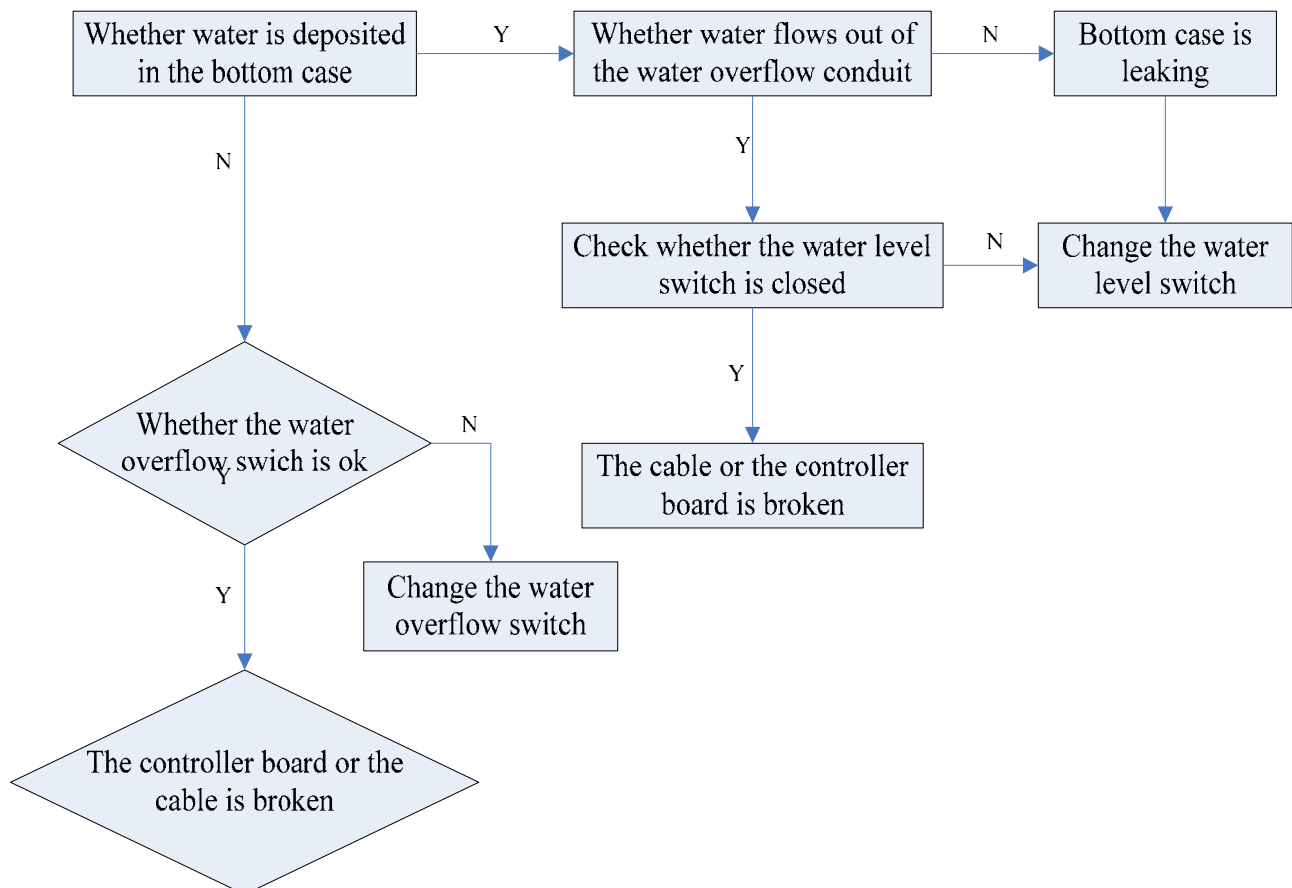


1-17-6. Power supply trouble

Phenomenon: dishwasher cannot work

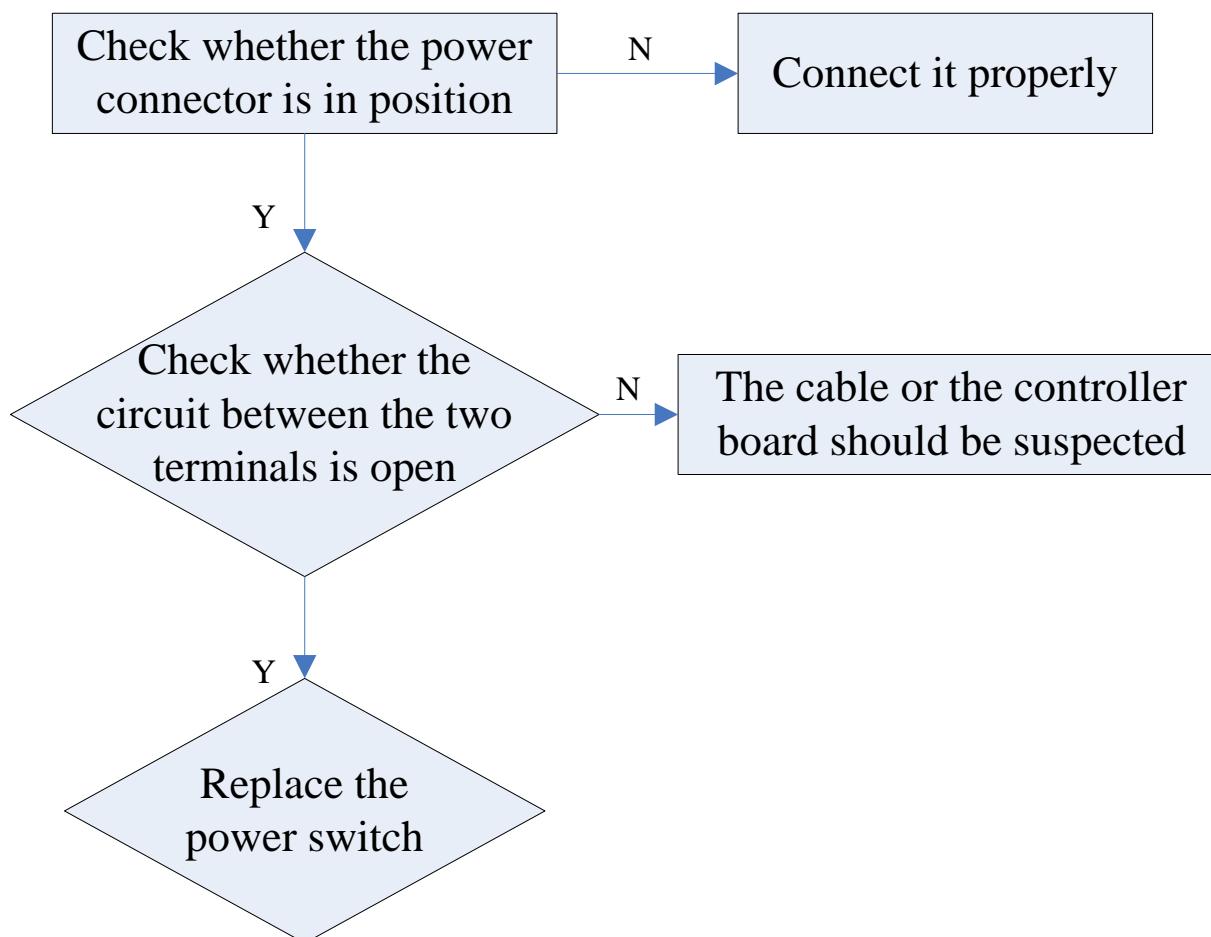

1-17-7. Leak trouble

Phenomenon: dishwasher stop working

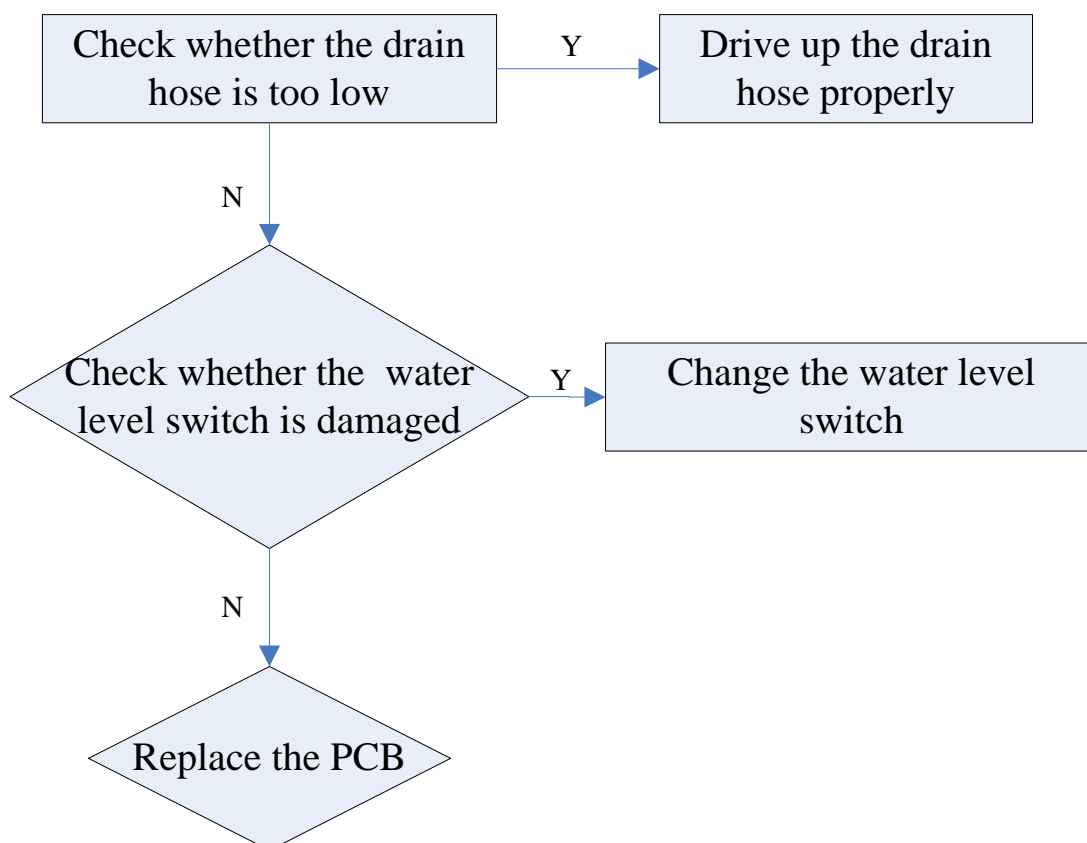

Service Manual

Model No: DW9-AFM Series


Issue

Rev.

1-19. Technical data

Width	45cm
Depth	60 cm
Height	85 cm
Capacity	9 standard place settings
Mains water pressure	0.03-0.6MPa
Power voltage	220-240V~ 50Hz
Total absorbed power	1950W
Maximum current intensity	10A

1-20. Circuit Diagram

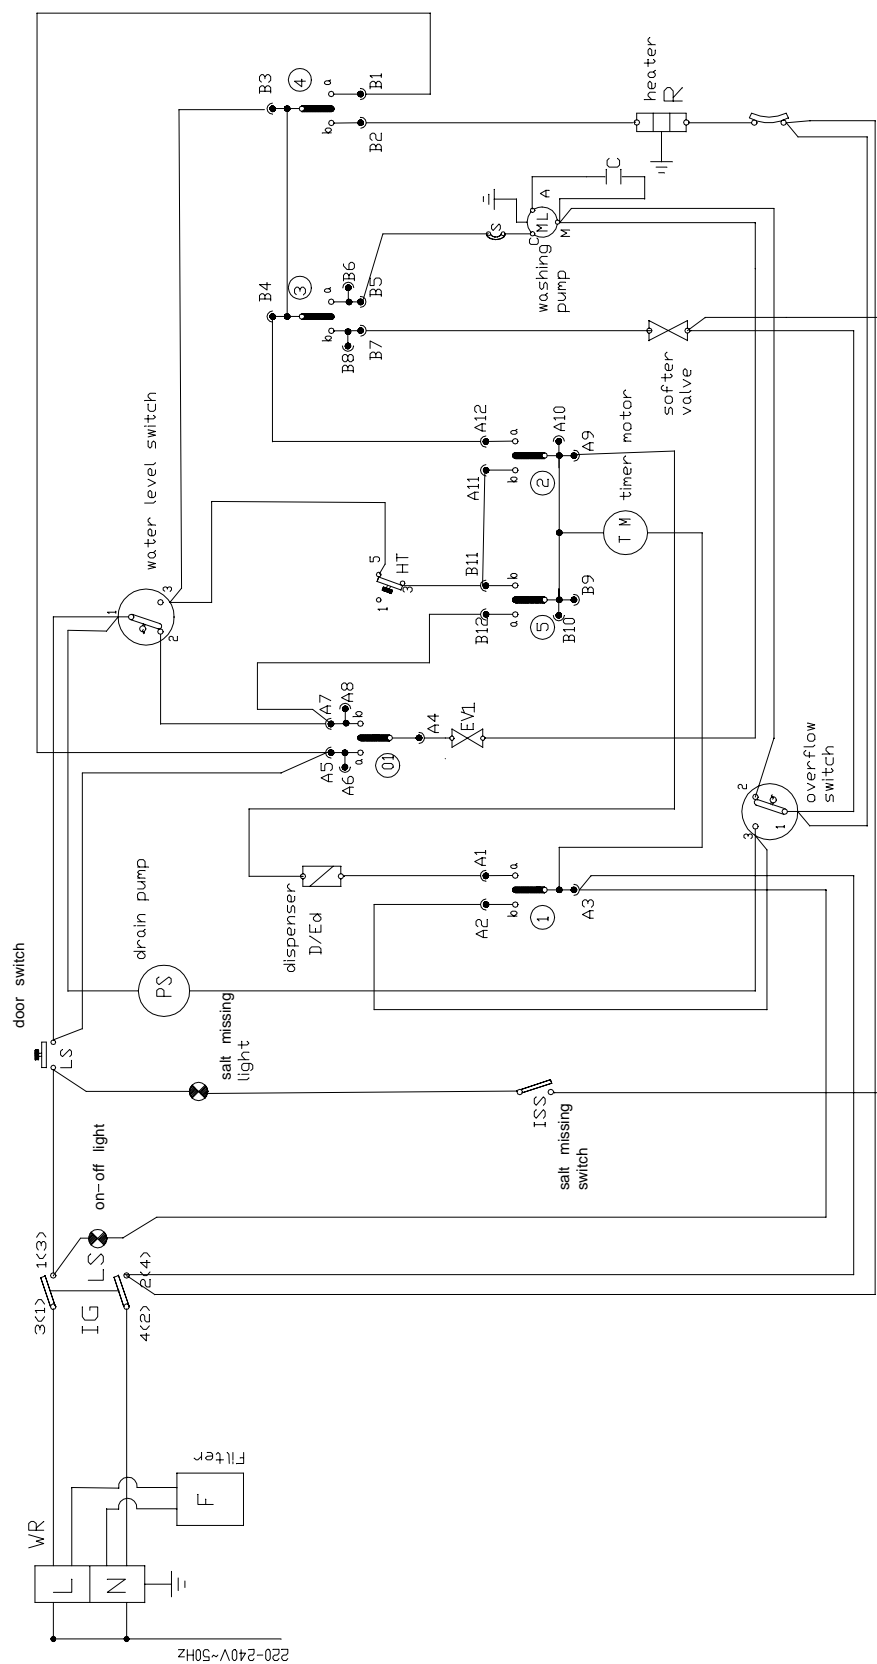

Service Manual

Model No: DW9-AFM Series

Issue

Rev.

HAUS

Dishwasher Service Manual

Customer Helpline 0845 600 4632